

PRACTICAL “DIY” INSTALLATION


Installing a drip irrigation system is easy! For best results, simply follow the steps below:



1 Fit the electronic water timer with the pressure reducer (code 91040) to the tap. The water is supplied through a 1/2" hose or directly by a 1/4" feeding tube; connect it to the water timer by means of the automatic threaded connector (code 91494) and the coupling (code 91345).




2 The 1/2" hose can be used to create a veritable watering circuit ideal for large balconies; in this case, use the 1/4" feeding tube to connect each of the drippers.

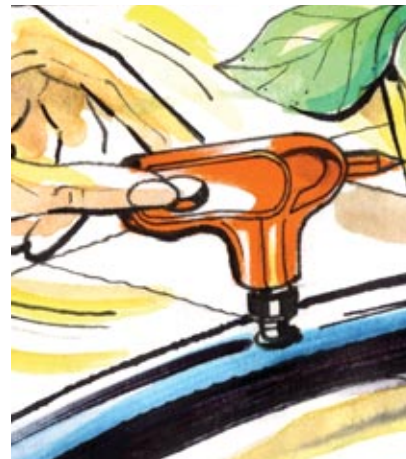

3 The Claber hole puncher makes hose holes with the exact diameter required, for watertight connections between the hose and feeding tubes. The tool can also be used to adjust and tighten drippers.



Cut lengths of the 1/4" hose to measure. After making holes in the 1/2" tube for each branching, connect each length to the 1/2" tube by means of the 2-way connector (code 91155). For greater flexibility and control of water flow to each branching, a tap can also be used for each feeding tube.

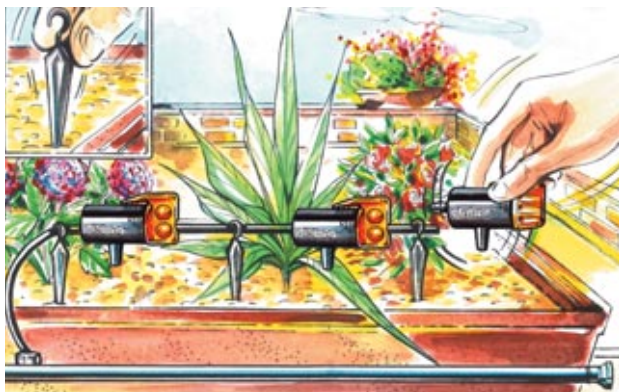

Fit the drippers to the 1/4" tube in such a way that they are near the plants to be watered, along the path of the tube marked out by the stakes. Once installation has been completed, all you have to do is set the water timer (and don't forget to turn on the tap)!

4
5